

# LA Audio

# LA Audio

A-60R

INTEGRATED AMPLIFIER

## INSTRUCTION



LA AUDIO ELECTRONIC CO. , LTD

9F-1 NO. 37 HSI TSARNG ROAD TAIPEI TAIWAN

WWW.laaudio.com.tw

TEL:+886-2-23092540 FAX:+886-2-23091615

READ THIS MANUAL CAREFULLY BEFORE YOU USE THIS  
VACUUM TUBE AMPLIFIER KEEP IT FOR FUTURE USE.

## ⚠️ SPECIALLY WARN

- To prevent fire or shock hazards DO NOT expose the unit to rain or moisture.
- To avoid electrical shock, Don't open the cabinet. Refer servicing to certified professional only. Please pay attention to the marks of safety and preventing electricity in the rear panel for the sake of your safety.

## ⚠️ AUDIO ADVISE

 
- This machine is designed following to the vacuum tube circuit and the component designed according to the high-voltage too. For the machine needn't add and change any components inside by you, we will not take any losses by anyone who disobeying this advises.

## Operating Instruction


Before operating the machine, please check the voltage whether conforms to your demands. Please select your needed voltage 230V or 115V. Plug the electron tube to the specified outlet according to following drawing number. Connect the loudspeaker and the output terminal of the machine and the signal cord at the same time. Then open the machine. If the different things happen when you are use the machine, For example, somking, percular, smell, aglow vacuum etc. please turn off the power and contact to your dealer or our company immediately.

## CONTROLS

### FRONT PANEL

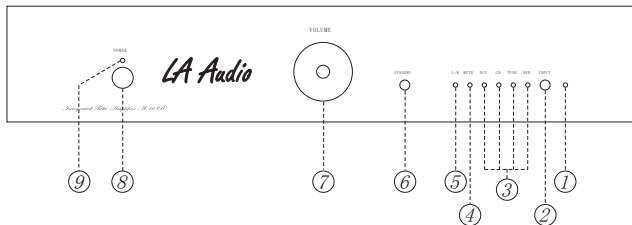

 1. TELECONTROL INCEPT
2. INPUT BUTTON
3. DVD,TRNER,CD,AUX LIGHT
- 4.MUTE
- 5.L/R:L or R TRACK CUT OVER
- 6.STNDBY
- 7.VOLUME CONTROL
- 8.POWER ON/OFF
- 9.POWER LIGHT

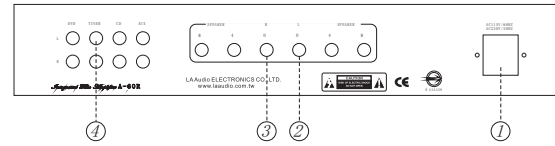


### REAR PANEL

1. AC POWER INPUT JACK
2. LEFT CHANNEL OUTPUT TERMINAL
3. RIGHT CHANNEL OUTPUT TERMINAL
4. RCA SIGNAL TERMINAL



### REMOTE CONTROL INSTRUCTION

 1. STANDBY
2. MUTE
3. DVD :DVD INPUT THE SIGNAL
4. AUX:AUX INPUT THE SIGNAL
5. INPUT: SIGNAL CHOOSE THE KEY
6. L/R: I or R TRACK CUT OVER
7. VOLUME-: LET UP VOLUME
8. CD :CD INPUT THE SIGNAL
9. TUNE:TUNER. TUNING CIRCUIT
10. PHON: PHONOGRAPH
11. VOLLUME+: ENLARGEMENT VOLUME

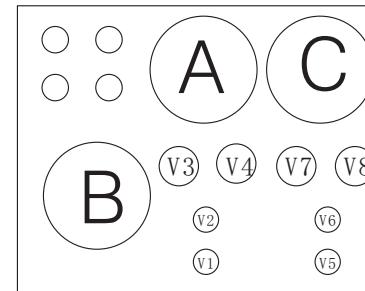

### VACUUM TUBE POSITION

- A and C:Output Transformer  
 B:Power Transformer  
 V1.V5:6N9P  
 V2.V6:6N8P  
 V3.V4.V7.V8:KT-88

## SPECIFICATIONS

1. POWER:115V/60Hz 230V/50Hz
2. OUTPUT POWER:60W×2
3. FREQUENCY:10Hz-45KHz
4. SIGNAL TO NOISE:≥88dB
5. OUTPUT IMPEDANCE:4Ω-8Ω
6. TOTAL HARMONIC DISTORTION:≤0.7%
7. CONSUMED POWER:280W
8. VACUUM TUBE:KT-88×4, 6SN7 (6N8P)×2, 6SL7 (6N9P) ×2
- 10.DIMENSION:45 (W) ×39 (D) ×19 (H) CM
- 11:NET WEIGHET:20Kg